 


Theater Stage diorama project


ex2-1173 / A4 / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.


These miniature views identify the supplied patterns; they are deliberately reduced.

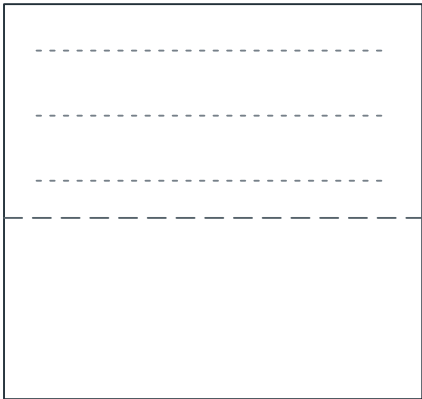

 1. Pattern 1

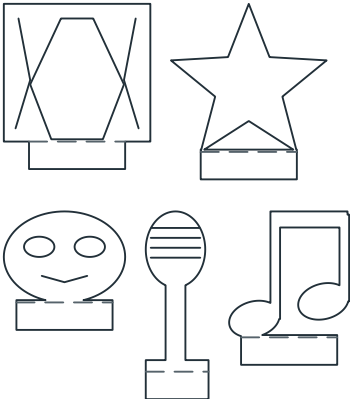

 2. Pattern 2

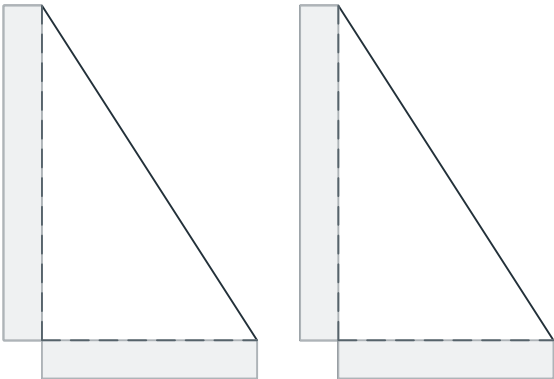


3. Pattern 3

3 pattern sheets supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

 Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Theater Stage diorama project


ex2-1173 / A4 / Pattern 1



 Stage base and fold-up back

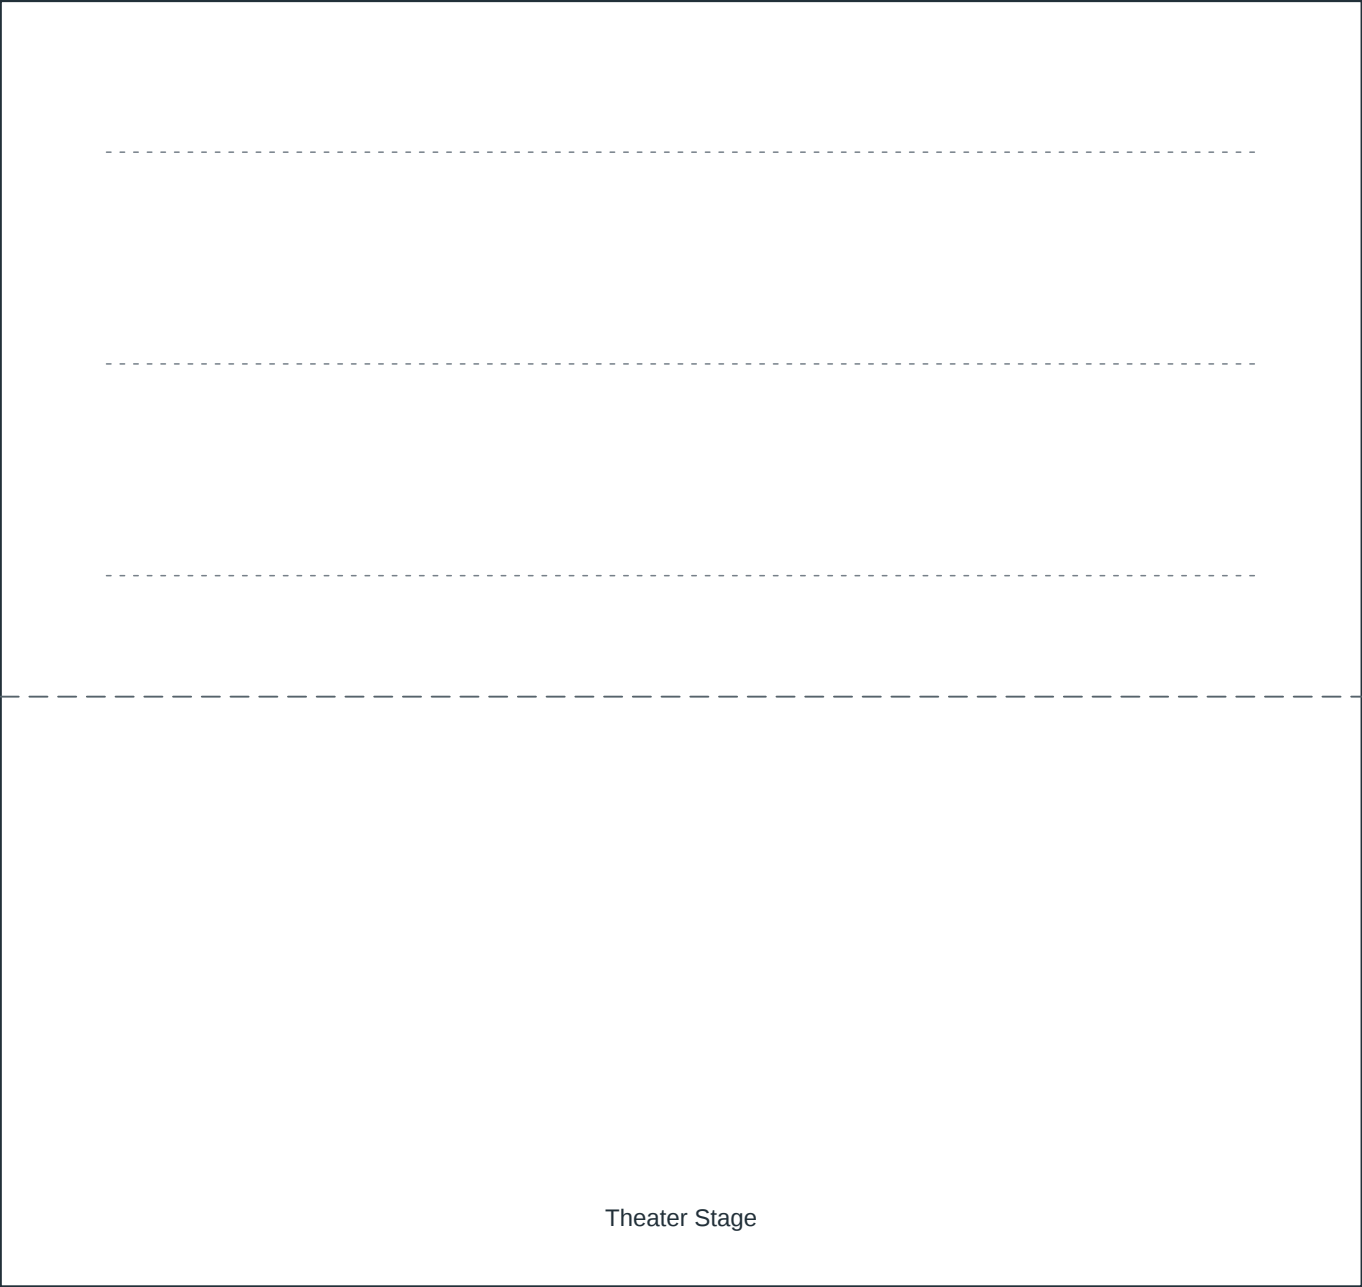

Theater Stage

 


Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Theater Stage diorama project

ex2-1173 / A4 / Pattern 2

 
Curtain

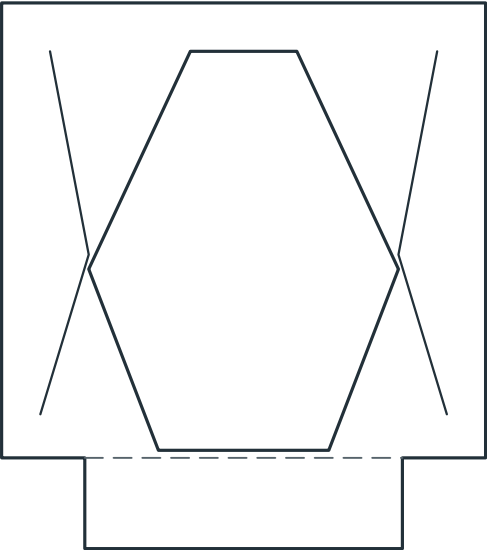


Star

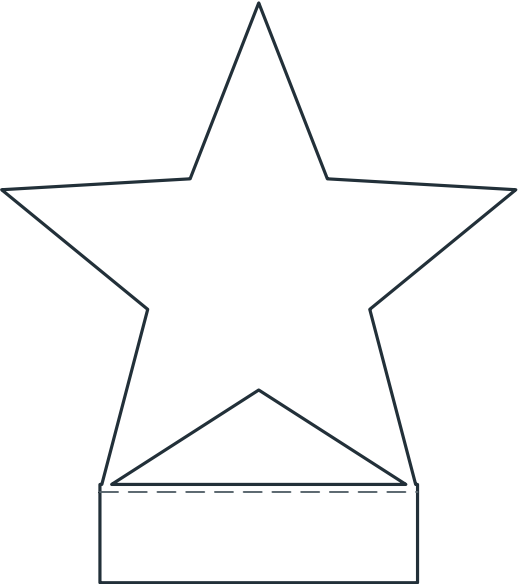 



Mask

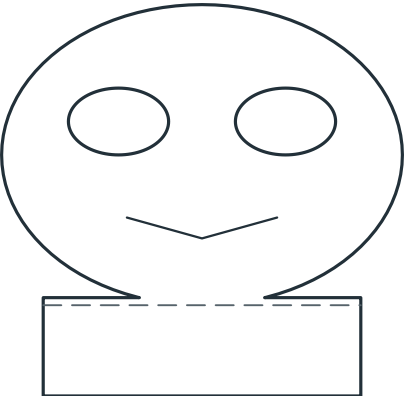 

Microphone

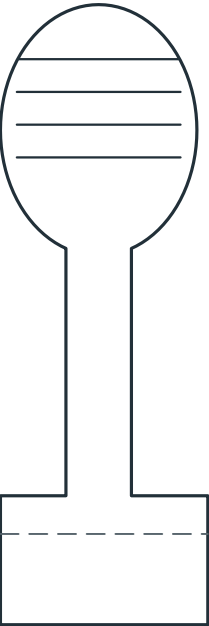 

Music Note

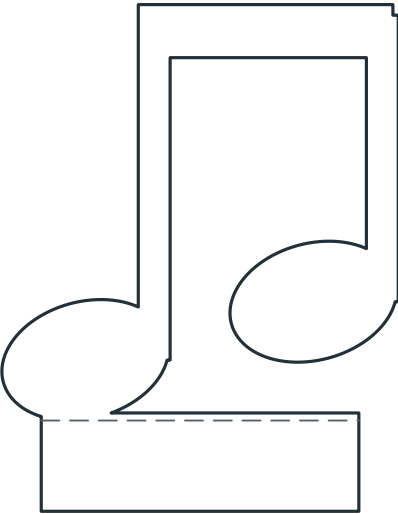  


Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Theater Stage diorama project

ex2-1173 / A4 / Pattern 3

 Back brace 1

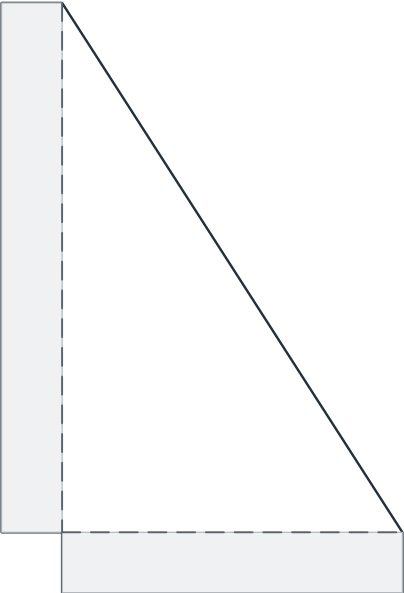

Back brace 2

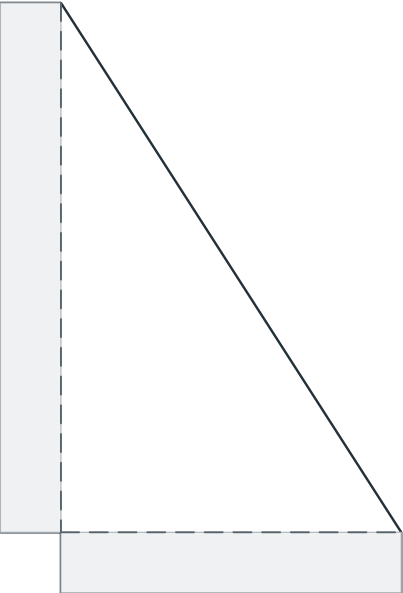 

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Theater Stage diorama project

ex2-1173 / A4 / Instructions

PURPOSE

Theater Stage diorama project developed as a measured original paper study. The packet provides the actual parts, joining or shaping marks, drawing dimensions and an assembly sequence. Print at actual size and dry-fit the parts before gluing.

DRAWING FACTS

- Stage: 180 mm wide with 92 mm floor and 78 mm back. Five individually drawn scene components and two back braces.

MATERIALS

Plain 100 to 140 gsm paper for a first dimensional trial; approximately 160 to 220 gsm card only after confirming the folds. Use a ruler, suitable scissors, a blunt scoring tool and a small amount of paper adhesive. An adult should handle internal cuts, holes and small fasteners.

HOW TO USE THESE PAGES

1. Cut the stage, five named components and both triangular back braces. Keep every small standing tab and narrow connecting bridge attached; cut only the outside contour, not the interior artwork.
2. Score the stage at 92 mm and raise the back. Bond brace tabs behind the back and under the floor, forming right angles.
3. Fold each component foot at its marked hinge. Place tall background pieces near the back; move foreground pieces forward until all subjects are visible.
4. Test the arrangement without glue first, then bond feet only. Keep edges within the base so the display can sit flat.
5. This is a fictional decorative setting. Set the finished scene on a flat surface and check that all components stand securely before displaying it.

LIMITS AND CHECKS

- Drawing dimensions describe flat paper surfaces, not verified internal capacity, load strength, fit or material compatibility.
- No mailing, food-contact, archival, toy-safety, protective-wear or cutting-machine certification is supplied.
- Make a plain-paper trial first; paper thickness and fold accuracy can change the fit.
- Trial: Measure the 50 mm reference and two named component dimensions.
- Trial: Make a complete empty trial and document fold direction, joining order, collision, stability and any fragile features.
- Trial: Repeat the trial using your chosen paper. Check that every join holds and each moving part works freely before decorating.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.