

Cable-wrap organizer card

Organizer cards / for loose disconnected accessories




Keep the cable loose and disconnected. Do not store a powered or warm cable on paper; do not force a tight bend.

Cable-wrap organizer card

Assembly guide / print at 100% / check 50 mm / physical trial required

MAKE THE PROJECT

A 95 x 64 mm organizer card with rounded side notches, end-retaining slots and a write-in ID panel.

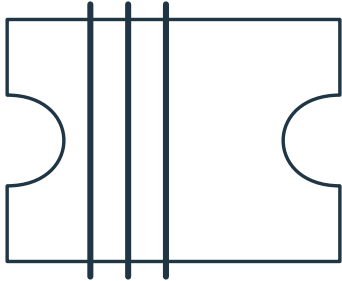

CONSTRUCTION SCHEMATIC

MATERIALS

Plain paper for a first trial; suitable light card for the final piece; ruler, scissors, blunt creasing tool and paper adhesive. Use appropriate adult help with cutting and small joining parts.

- 01** Cut the outline and rounded side notches. Open the two short diagonal retaining slits without extending them into the center panel.
- 02** Write an equipment name in the central ID area. Keep personal contact details off cards that may be shared.
- 03** Wrap a short disconnected cable loosely around the broad waist, leaving large curves rather than tight folds.
- 04** Use the slits only for a suitably thin, flexible loose end. Do not force a thick or fragile cable into them.
- 05** This card is for organizing disconnected low-voltage accessories, not electrical insulation, cable protection or storage of a powered or warm cord.

Print at actual size and check the 50 mm scale. SVGs are editable vector masters; cutting-machine compatibility is not certified.