


Art-print corner presentation sleeves

ex2-1244 / A4 / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

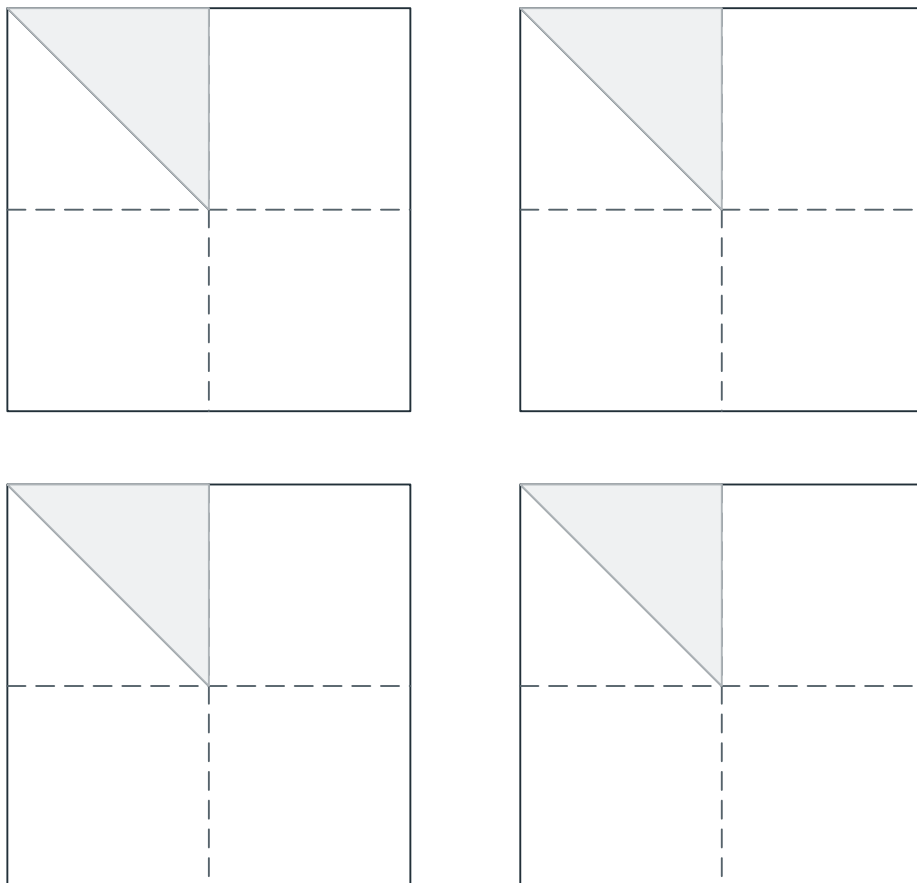

1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Art-print corner presentation sleeves

ex2-1244 / A4 / Pattern 1

Corner

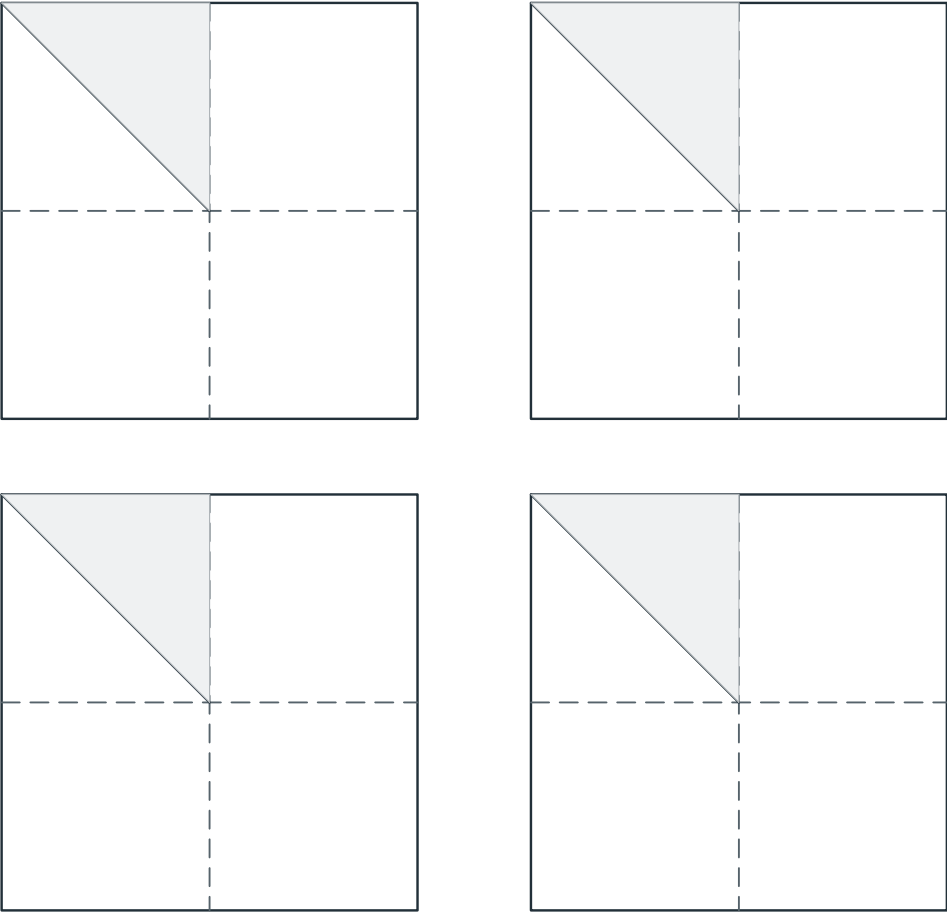

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Art-print corner presentation sleeves

ex2-1244 / A4 / Instructions

PURPOSE

Art-print corner presentation sleeves. Use expendable samples. No archival, impact or postal protection is supplied.

DRAWING FACTS

- Four 55 x 55 mm corner blanks with 27.5 mm fold grid. For presentation or spacing trials only.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the four square blanks and each short diagonal slit. Score the horizontal and vertical center folds.
2. Fold both center lines, then overlap the two sections beside the diagonal slit to form a shallow corner sleeve. Glue only the shaded triangle to its overlapping paper face.
3. Dry-fit around an expendable paper corner, keeping the sample free of adhesive. Check for marking and remove the sleeve before using a valuable original.

LIMITS AND CHECKS

- Use expendable samples. No archival, impact or postal protection is supplied.
- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.