


# Folded corner spacer study

ex2-1259 / A4 / Parts overview - NOT A CUTTING SHEET

-----

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

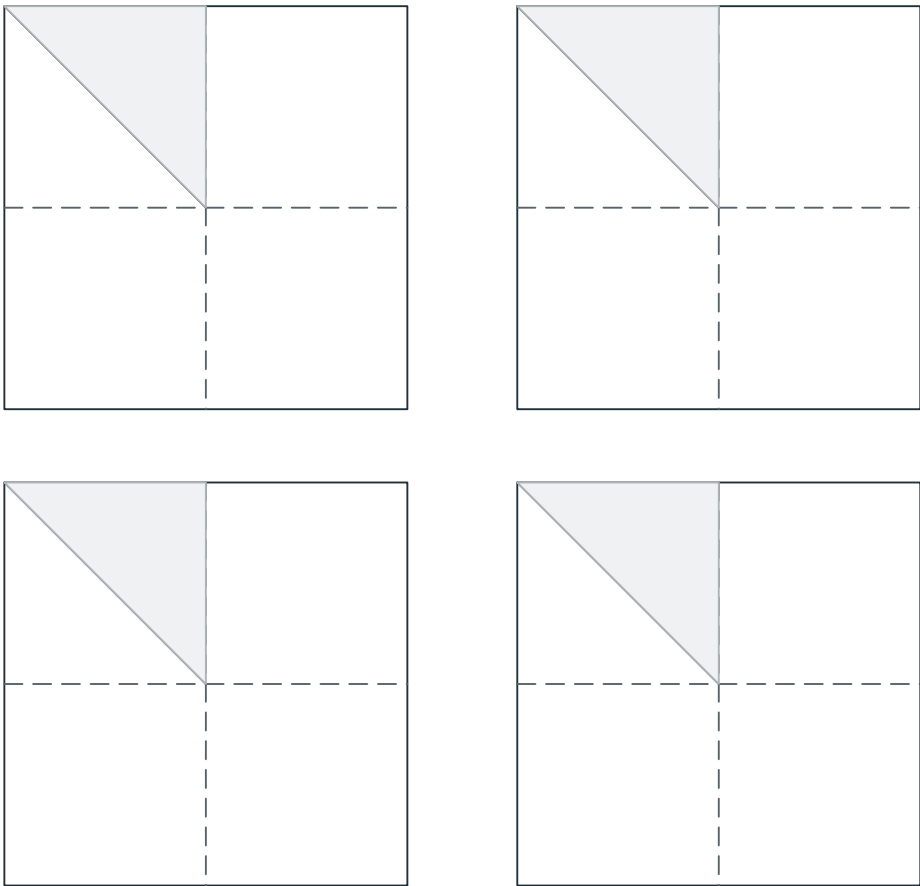


1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.

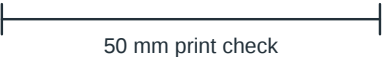





Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.

# Folded corner spacer study

ex2-1259 / A4 / Pattern 1



Padding

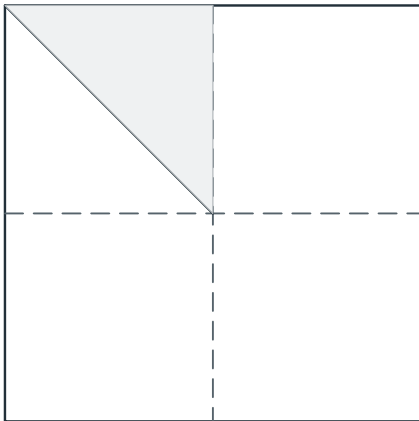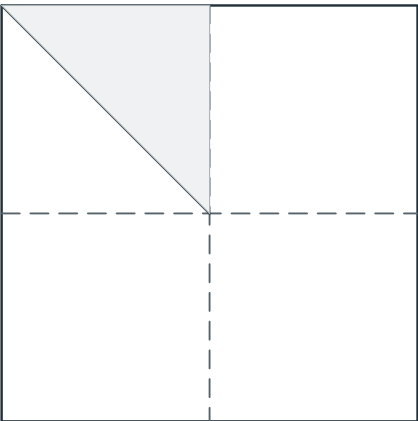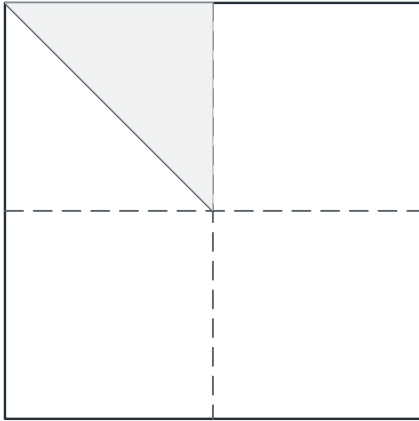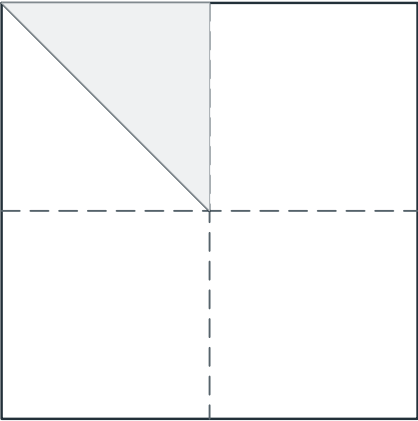

Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.

# Folded corner spacer study

ex2-1259 / A4 / Instructions

---

**PURPOSE**

Folded corner spacer study. A fit and spacing exercise, not protective padding or a rated shock absorber.

**DRAWING FACTS**

- Four 55 x 55 mm corner blanks with 27.5 mm fold grid. For presentation or spacing trials only.

**MATERIALS**


Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

**HOW TO USE THESE PAGES**

1. Cut the four square blanks and short diagonal slits. Score both center folds.
2. Fold and overlap the sections beside each diagonal slit, gluing the shaded triangle behind its overlapping face to form a corner spacer.
3. Try the four spacers around a lightweight expendable sample. Record the spacing and any crushing; these are display spacers, not impact-protection pads.

**LIMITS AND CHECKS**

- A fit and spacing exercise, not protective padding or a rated shock absorber.
- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.

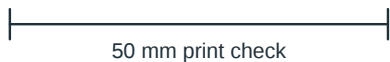

50 mm print check

Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.