


Embossing Sample Sleeve package specialty project

ex2-1263 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

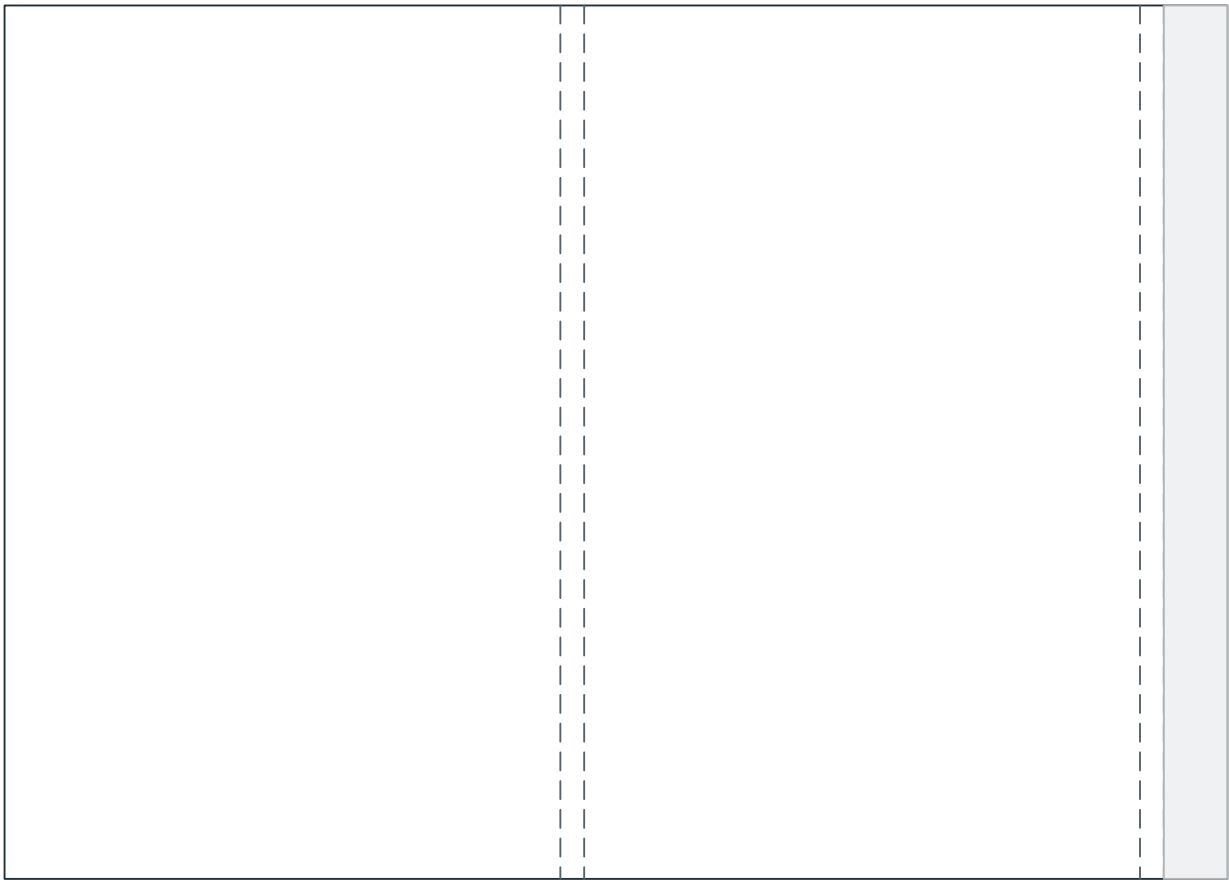

1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Embossing Sample Sleeve package specialty project

ex2-1263 / LETTER / Pattern 1

Sample sleeve

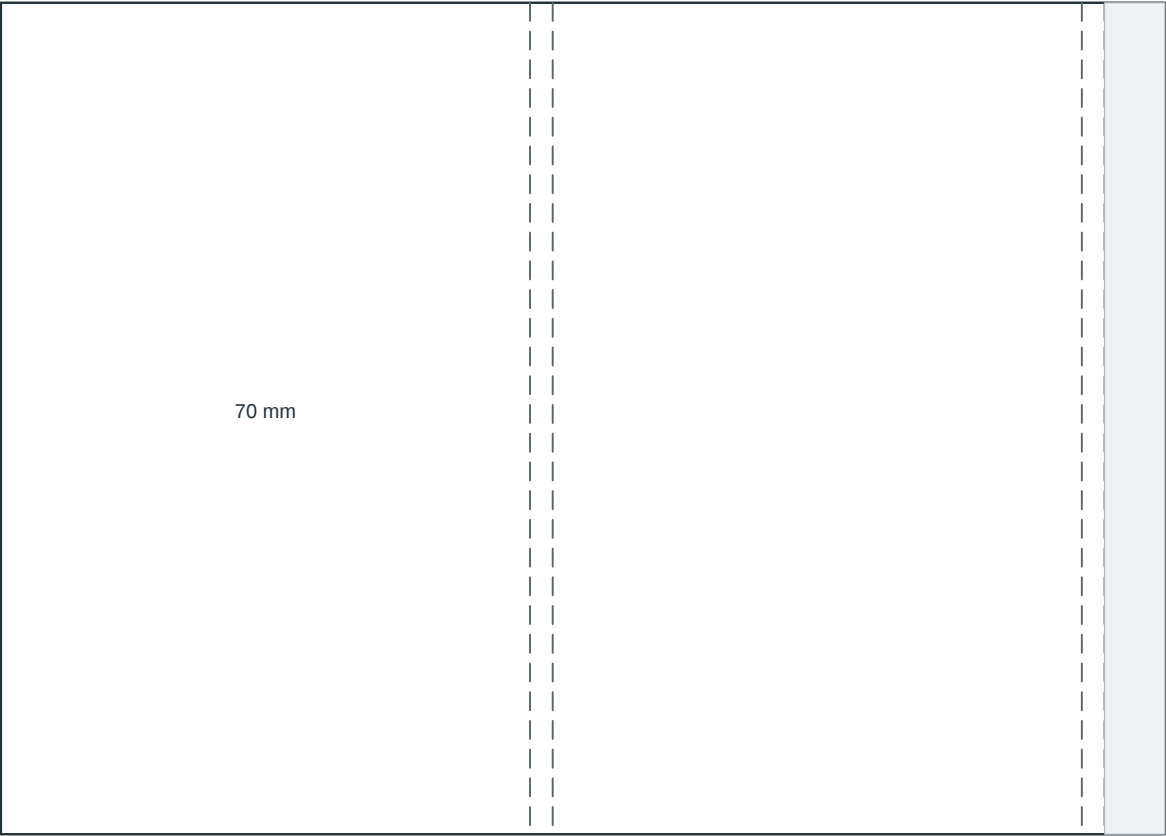

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Embossing Sample Sleeve package specialty project

ex2-1263 / LETTER / Instructions

PURPOSE

Embossing Sample Sleeve package specialty project developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Sleeve panels: 70, 3, 70 and 3 mm; depth 110 mm with 8 mm seam tab.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the sleeve blank with its narrow seam tab attached and score the four panel boundaries.
2. Fold the 70, 3, 70 and 3 mm panels around an expendable flat insert. Glue only the 8 mm seam tab behind the first panel and leave both ends open.
3. Remove the insert while the sleeve dries, then check sliding clearance along the full 110 mm depth. Keep adhesive out of the sleeve.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.