


Corner pocket envelope

Nominal panel 85 x 85 mm / Solid = cut, dashed = fold / Trial-fit your contents

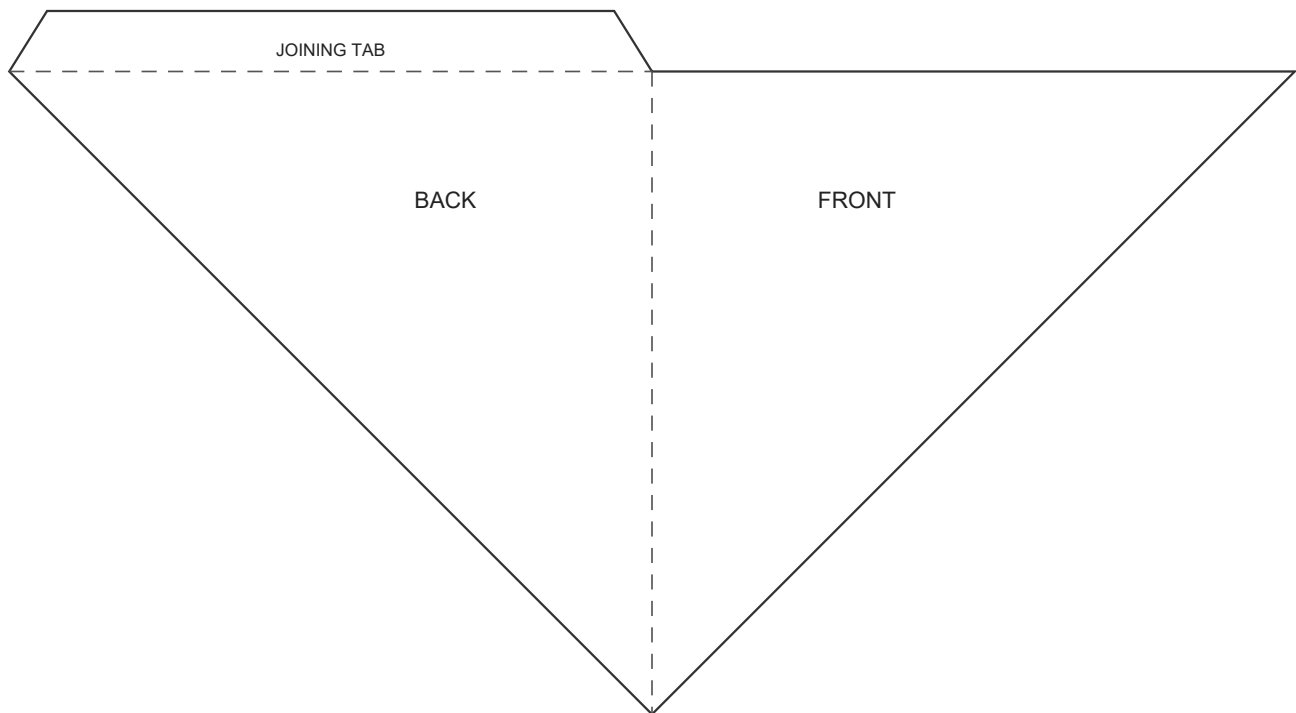

Fold FRONT onto BACK at the center dashed line. Wrap the top tab over the matching top edge and glue it onto FRONT. Keep the long sloping edge open. See page 2.



50 mm scale check | Measure after printing

Corner pocket envelope

Construction notes / Use with the matching template page

01 / Prepare

Print at actual size and measure the 50 mm line with a ruler. Complete any printed fields while flat. Use a spare sheet for the first trial.

02 / Cut

Cut the solid outer silhouette, keeping the tabs attached. Dashed lines are folds; do not cut them.

03 / Dry-fold

Crease the vertical center line and the top-tab line. Fold the right FRONT triangle onto the left BACK triangle. Their top edges and long sloping edges should align.

04 / Join

Wrap the top JOINING TAB over the matching straight top edge onto the outside of FRONT and glue it there. Keep the long sloping edge unglued: this is the pocket opening.

05 / Check the fit

The nominal panel is 85 x 85 mm; folds and paper thickness reduce usable space. Measure and trial-fit the intended item before making more. This is not a standard card-size or archival-storage guarantee.

06 / Finish

Let the joins dry. Slide a scrap page corner into the diagonal opening and check that it reaches the pocket corner without forcing the paper.



50 mm scale check | Measure after printing