


Tri-fold letter enclosure

Full-size cutting template / keep all fold guides

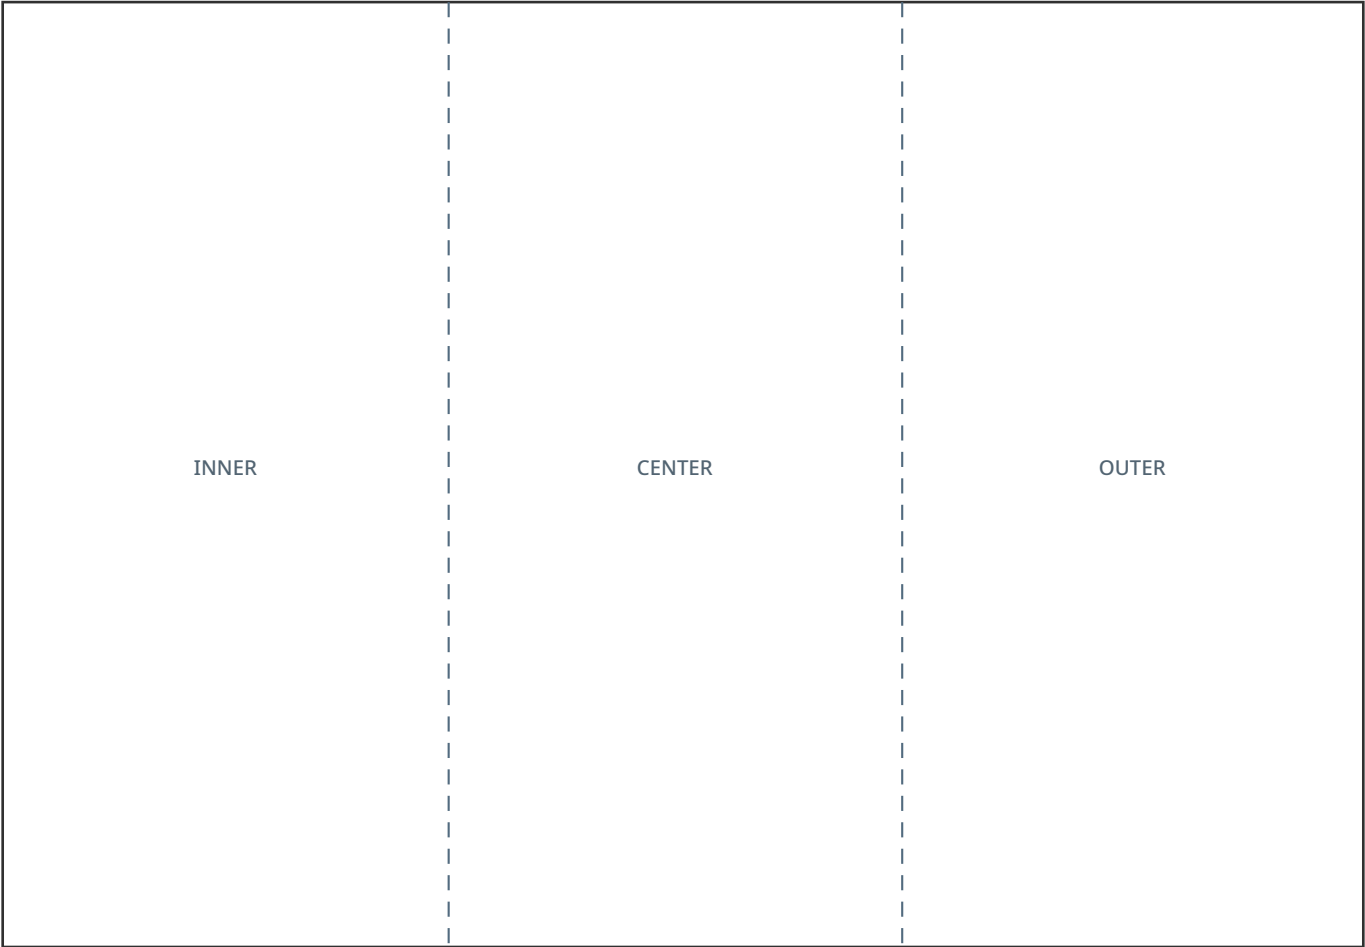

50 mm scale check | Measure after printing

Tri-fold letter enclosure

Assembly / solid = cut / dashed = fold

MAKE THE PROJECT

A 180 x 125 mm tri-fold base with panel widths 59, 60, 61 mm.

YOU WILL NEED

Paper or light card, scissors, ruler and a blunt scoring tool; adhesive for added panels.

- 01 Cut around the outer rectangle. Score only the dashed fold lines before decorating the blank panels.
- 02 Fold the 59 mm inner panel over the center first. Fold the 61 mm outer panel over that stack.
- 03 Keep thick embellishments away from the fold; the unequal panels provide only nominal paper allowance.
- 04 Check the finished folds on scrap first. These dimensions do not establish compatibility with a commercial card or envelope size.

Try the pattern on ordinary paper first. Nominal fold dimensions exclude paper thickness. No physical assembly, load-bearing, food-contact or shipping performance has been verified.

