


Dried-flower bouquet wrap

gif-102 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

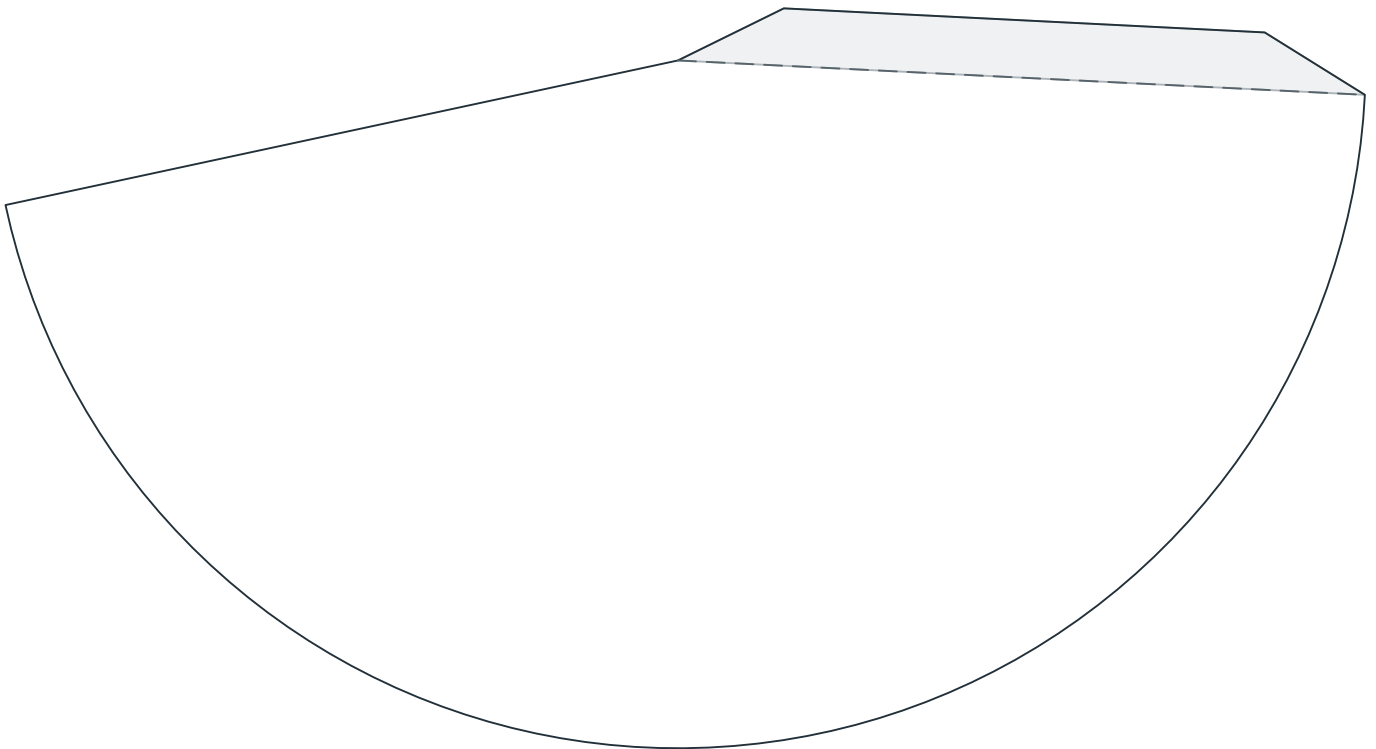


1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.

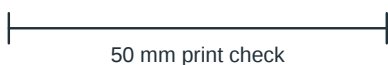


Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Dried-flower bouquet wrap

gif-102 / LETTER / Pattern 1

Cone wrap

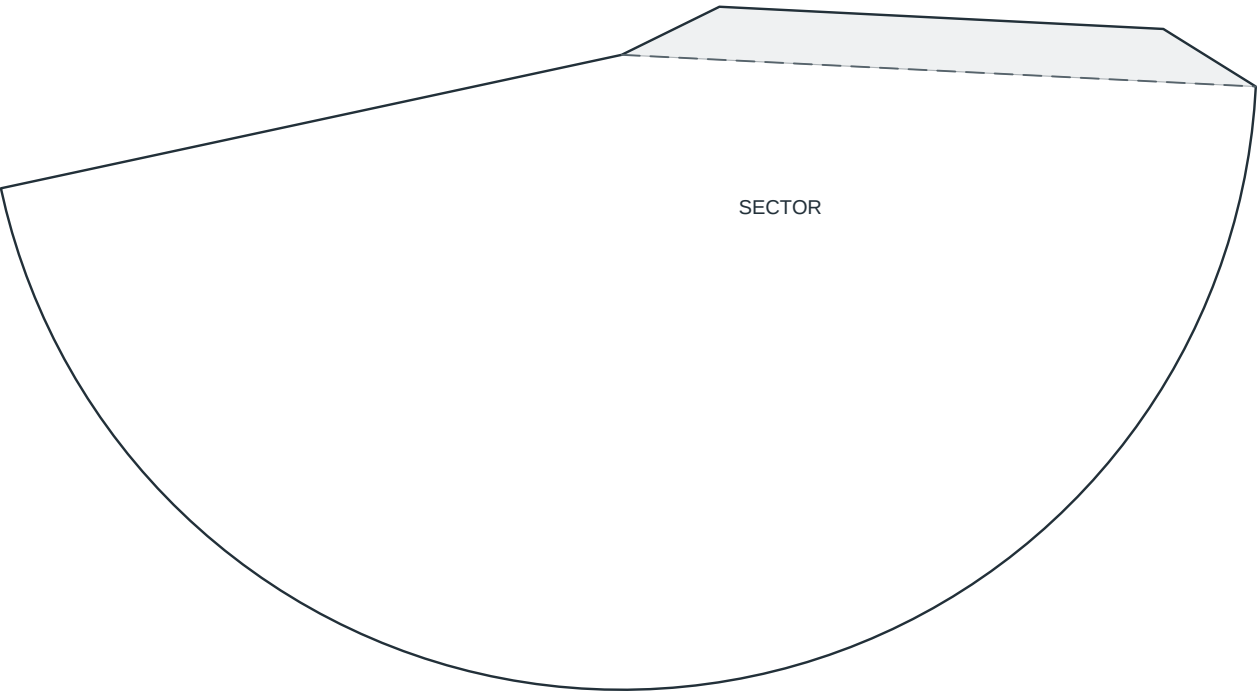

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Dried-flower bouquet wrap

gif-102 / LETTER / Instructions

PURPOSE

Dried-flower bouquet wrap developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Cone sector radius: 84 mm; angle 165 degrees; joining tab 7 mm.
- Ideal paper-surface cone: base diameter 77.00 mm and height 74.66 mm before material/adhesive effects.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the sector with its narrow seam tab attached. Gently curl the paper without creasing the curved surface flat.
2. Bring the plain radial edge over the shaded seam tab, aligning the point and curved rim endpoints. Glue this overlap and let it dry around a plain-paper trial former.
3. The wide rim remains open; no bottom disc is supplied. Check that the seam lies flat before adding a dry, lightweight display insert.
4. Keep stems and moisture inside a separate suitable holder. Fit this decorative paper wrap outside the holder; do not use paper as a water container or carrying sleeve.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.