
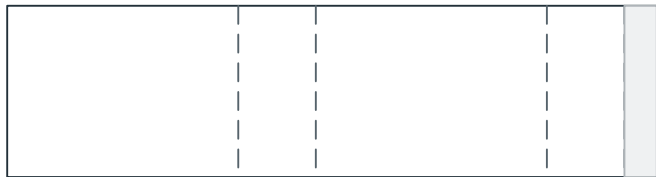


Suitcase-style paper box

gif-162 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

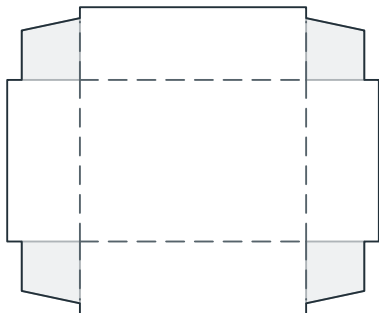


1. Pattern 1

2. Pattern 2

2 pattern sheets supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Suitcase-style paper box

gif-162 / LETTER / Pattern 1

Drawer base

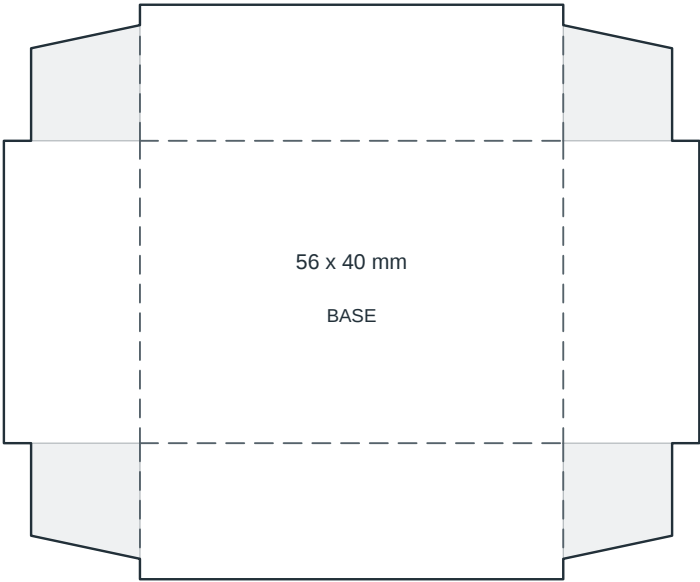

Outer sleeve




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Suitcase-style paper box

gif-162 / LETTER / Pattern 2

Display handle and straps



50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Suitcase-style paper box

gif-162 / LETTER / Instructions

PURPOSE

Suitcase-style paper box developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Drawer panel: 56 x 40 mm with 18 mm walls.
- Sleeve panel dimensions: 57.2 and 19.2 mm, depth 42.4 mm. Added nominal clearance is not a measured fit result.

MATERIALS


Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut all supplied parts with their corner tabs attached and score the marked folds.
2. Raise the base tray walls. Glue each shaded corner tab behind its adjacent wall and let the tray dry square on a flat surface.
3. Fold the separate sleeve around its four panel hinges. Glue only its narrow seam tab, leaving both ends open. Let the sleeve dry before sliding the empty tray inside.
4. Pre-fold the handle at its two marked end lines. Attach those short ends to the outside of the sleeve, leaving the middle arched. Fit the two decorative straps around the sleeve and fix their ends clear of the drawer opening.
5. Check sliding clearance on the intended card stock. Support the model from underneath; the paper sleeve and decorations are not carrying fittings.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.

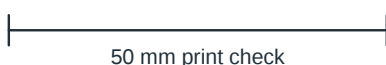

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.