


# Handle-top takeaway-style box

gif-172 / A4 / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

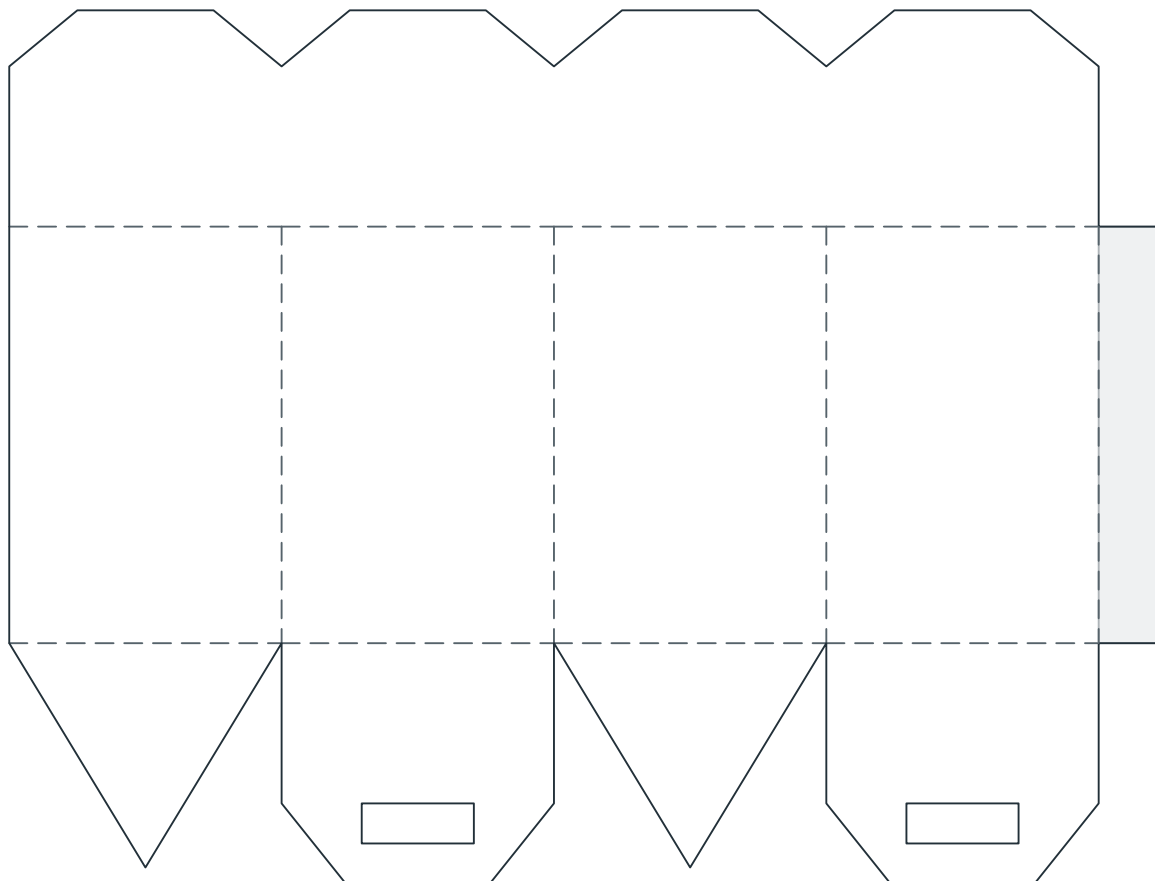

## 1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.

# Handle-top takeaway-style box

gif-172 / A4 / Pattern 1

Handle carton net

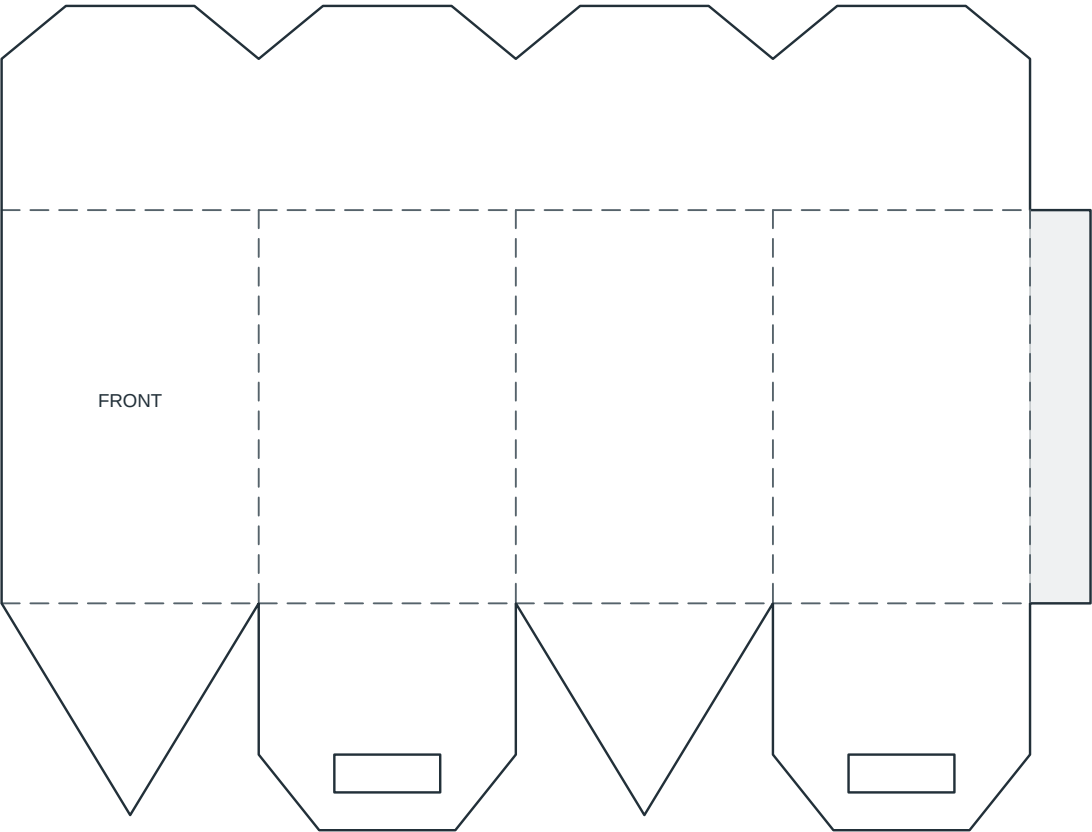

Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.

# Handle-top takeaway-style box

gif-172 / A4 / Instructions

-----

**PURPOSE**

Handle-top takeaway-style box developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

**DRAWING FACTS**

- 4 wall panels, each 34 mm wide; height between main end folds 52 mm; seam flap 8 mm.

**MATERIALS**

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

**HOW TO USE THESE PAGES**

1. Cut the perimeter and score all marked panel and flap hinges.
2. Fold the four walls into a square tube. Glue the 8 mm shaded side flap behind the first wall and keep the tube square while it dries.
3. Fold two opposite bottom flaps inward, then fold the other pair over them. Glue the overlapping bottom areas and let the empty carton dry on a flat surface.
4. Cut the two rectangular top slots. Fold the triangular roof panels inward and bring the two taller slotted panels together. Pass a short ribbon through the aligned slots and tie loosely to close; the paper top is decorative, not a carrying handle.

**LIMITS AND CHECKS**

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.  
Use the paper edition that matches the printer tray.