


Ribbon-thread gift pouch

gif-184 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

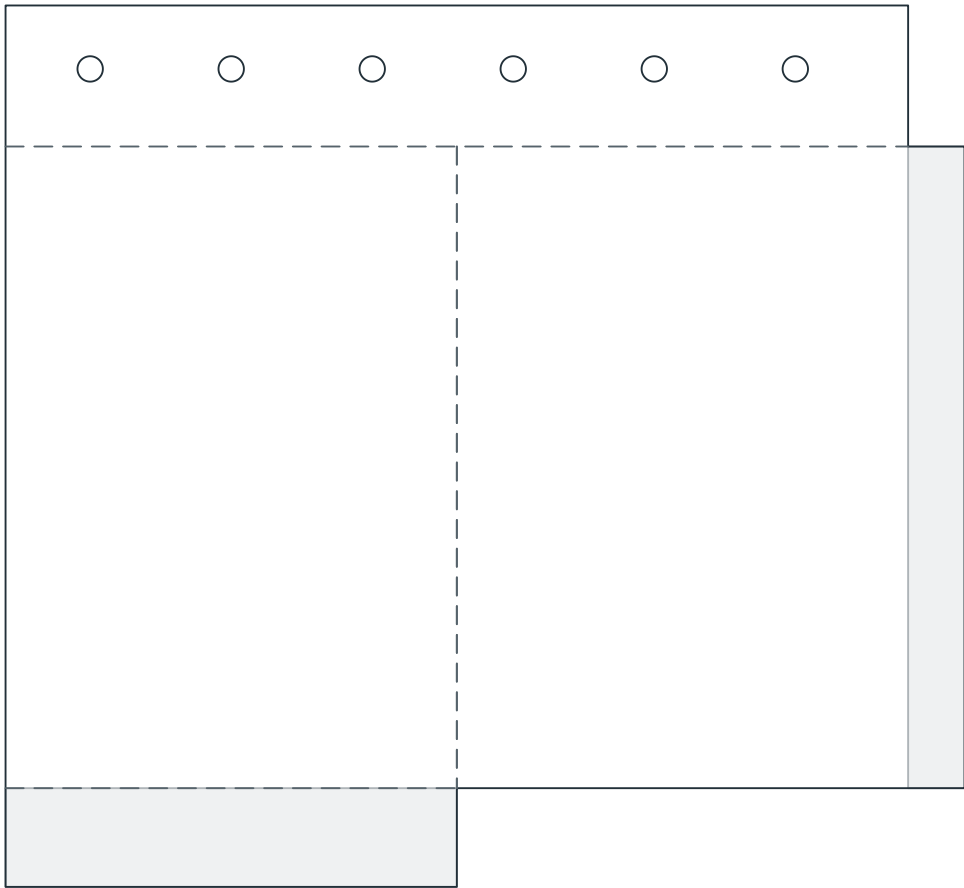

1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.





Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Ribbon-thread gift pouch

gif-184 / LETTER / Pattern 1

Pouch net

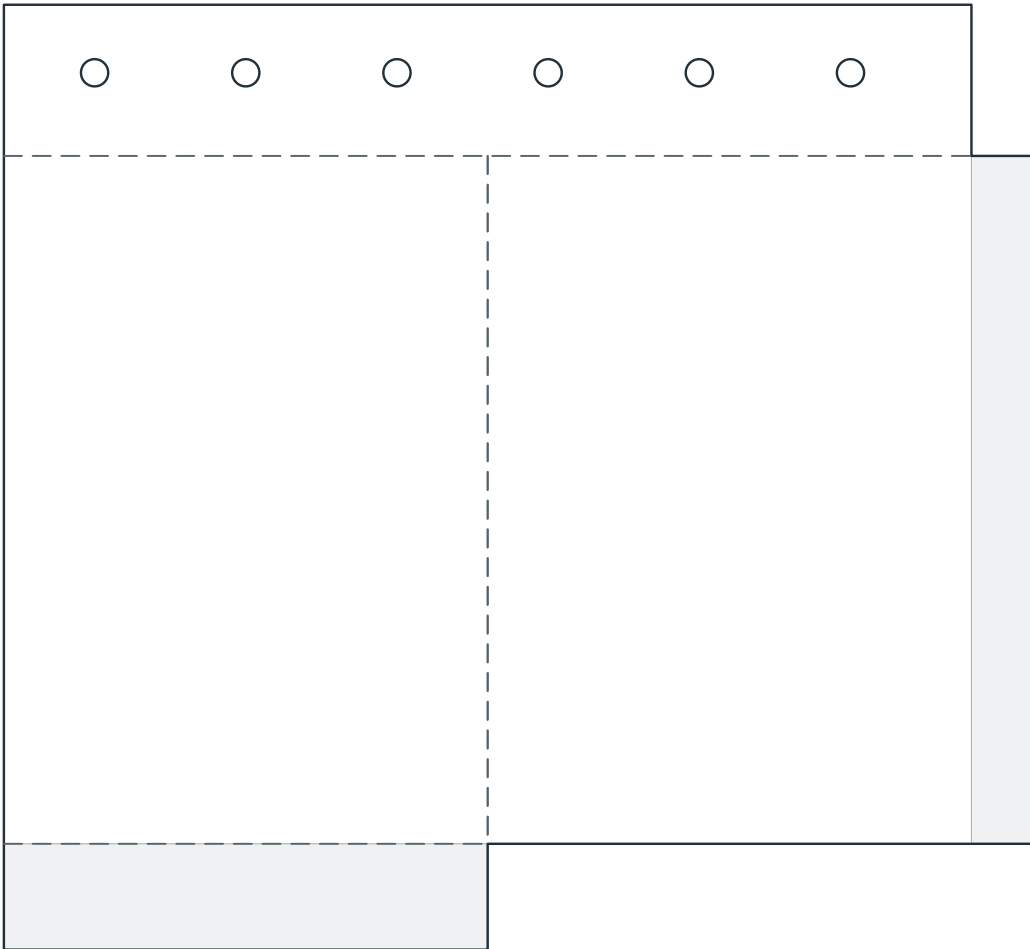

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Ribbon-thread gift pouch

gif-184 / LETTER / Instructions

PURPOSE

Ribbon-thread gift pouch developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Two 64 x 91 mm panels, 14 mm bottom joining tab and 8 mm side seam.
- Top closure band: 20 mm.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the net and score the center panel fold, bottom tab hinge and top closure hinge. Cut the marked top holes before assembly.
2. Fold the two main panels face to face and glue the 8 mm shaded side seam behind the opposite panel. Keep adhesive out of the pocket.
3. Fold the 14 mm bottom tab over the opposite panel and glue its shaded area. Leave the top opening free.
4. Loosely lace a short ribbon through the top holes, working around the opening, and tie without gathering the paper tightly. Untie it to reopen.
5. Test repeated opening with an expendable, dry paper insert. Support the pouch from underneath; the closure is not a carrying loop.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.