


Scalloped-edge favor basket

gif-191 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

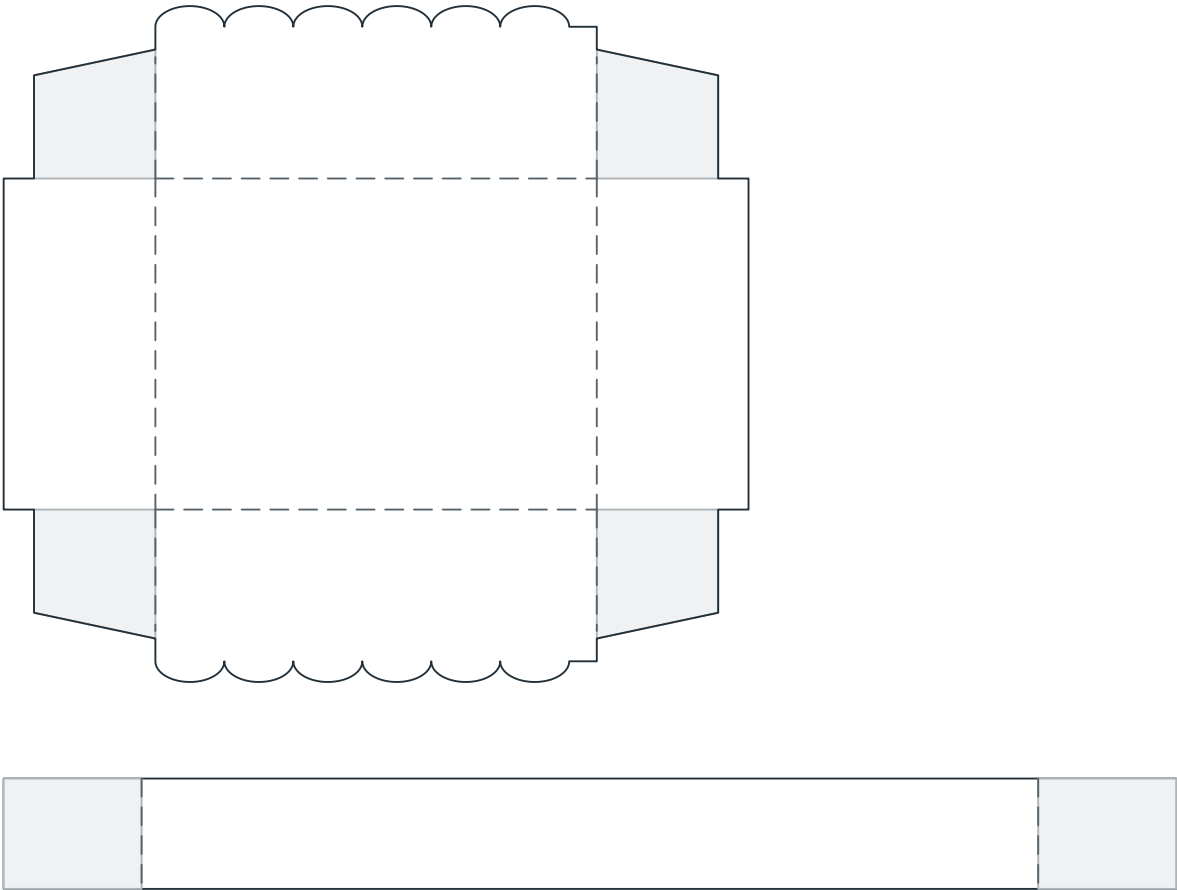

1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.



Scalloped-edge favor basket

gif-191 / LETTER / Pattern 1

Basket body

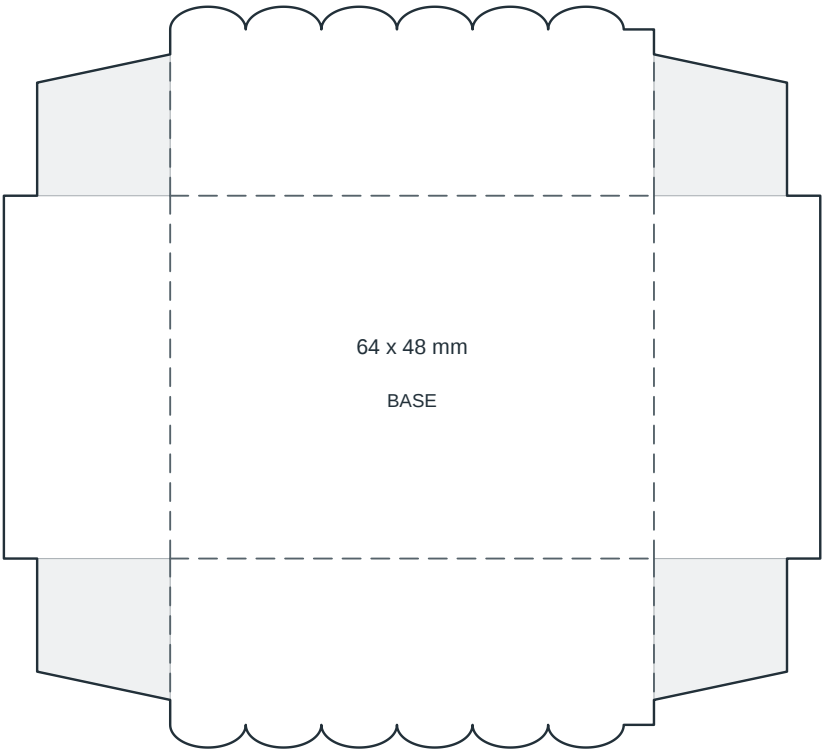

Decorative basket handle

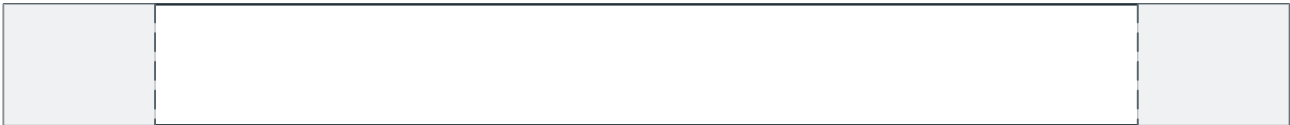

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Scalloped-edge favor basket

gif-191 / LETTER / Instructions

PURPOSE

Scalloped-edge favor basket developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Basket base: 64 x 48 mm with 22 mm walls. Handle strip: 170 x 16 mm with two 20 mm fixing zones.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the body and separate handle, retaining all corner tabs.
2. Score and raise the four body walls. Glue each shaded corner tab behind the adjacent wall.
3. Curve the handle without folding its center. Fold its two 20 mm fixing zones and glue them to the insides of opposite walls.
4. Let the handle bonds dry while the basket remains supported. Use the finished model for display and carry it by supporting the base.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.