


Miniature carton display cradle


Tray net / keep every corner tab

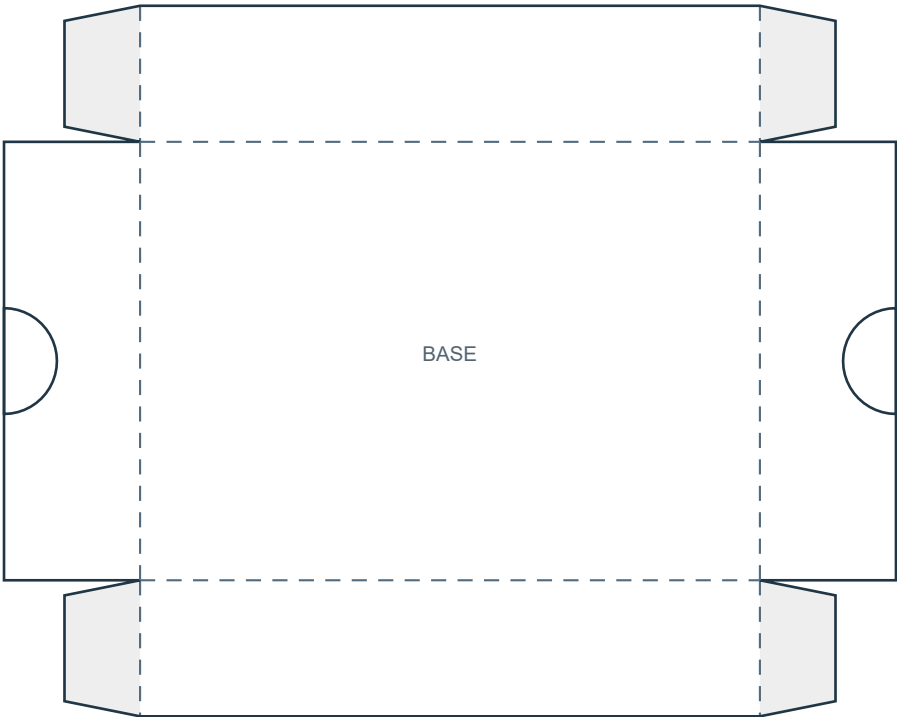

Cut the two edge-connected thumb recesses.

Miniature carton display cradle

Liner and internal pieces / do not trim parts to force a fit



50 mm scale check | Measure after printing

Miniature carton display cradle


Assembly and use / Print at actual size / Make a plain-paper trial

MAKE THE PROJECT

Make a shallow display cradle with two edge recesses for lifting a small presentation item.

YOU WILL NEED

Plain paper for a trial; light card if suitable; ruler, scissors, blunt creasing tool and paper adhesive.

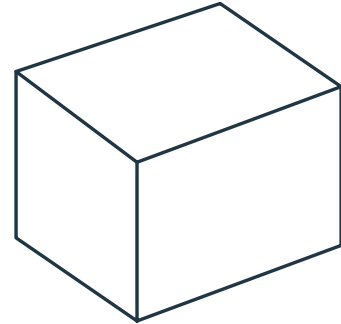

CONSTRUCTION SCHEMATIC

- 01** Print all matching pages at 100%. Measure a 50 mm reference. Cut solid outer outlines; keep joining tabs and score dashed folds.
- 02** Cut the tray outline with all four corner tabs and the separate LINER. Score around BASE and along each corner-tab fold.
- 03** Raise the four walls around BASE. Fold the corner tabs inward and glue each tab to the inside of its adjacent wall.
- 04** Square the tray and let the joins dry. Place LINER on the inside base; attach it only after checking that it lies flat.
- 05** Cut both semicircular thumb recesses connected to the tray's outer edges. They remain in opposite walls when the tray is folded.
- 06** Place the intended small carton or item in the dry cradle. Check that the two recesses let you lift it without bending the walls.

Trial-fit the item inside the nominal 82 x 58 mm base and 18 mm walls. Support the base when moving the display.



50 mm scale check | Measure after printing