


Paper succulent rosette

pap-051 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

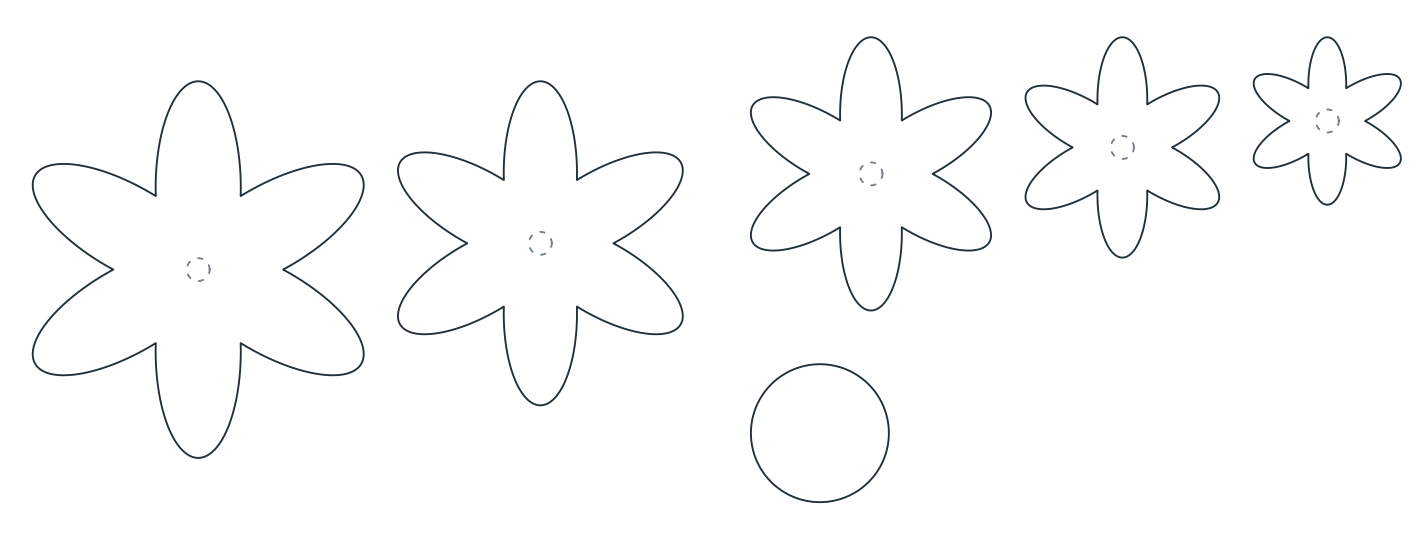

1. Pattern 1

2. Pattern 2

2 pattern sheets supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Paper succulent rosette

pap-051 / LETTER / Pattern 1

Succulent component 1

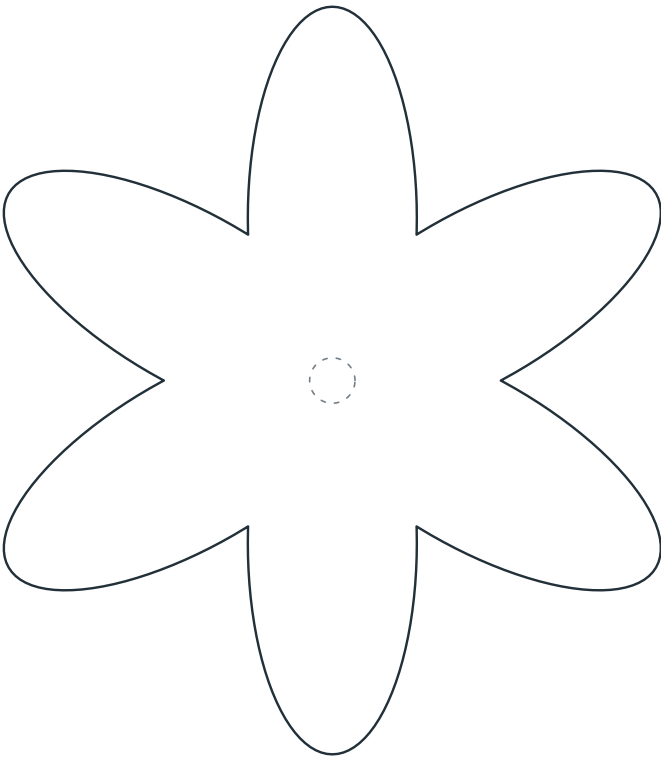

Succulent component 2

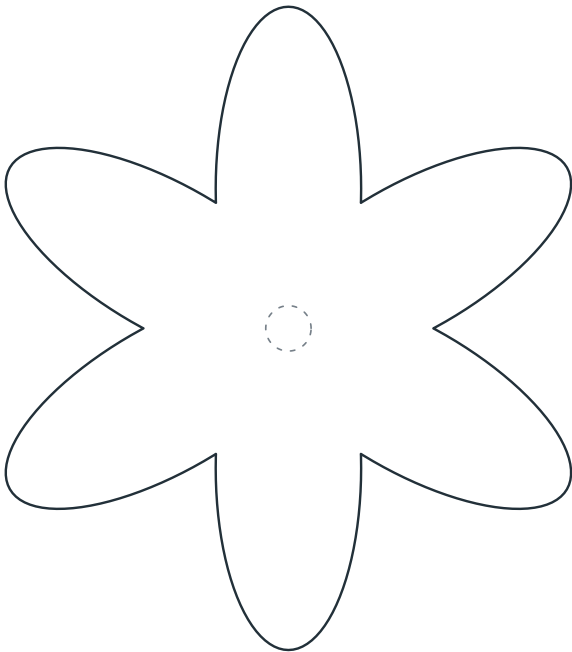


Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Paper succulent rosette

pap-051 / LETTER / Pattern 2


Succulent component 3

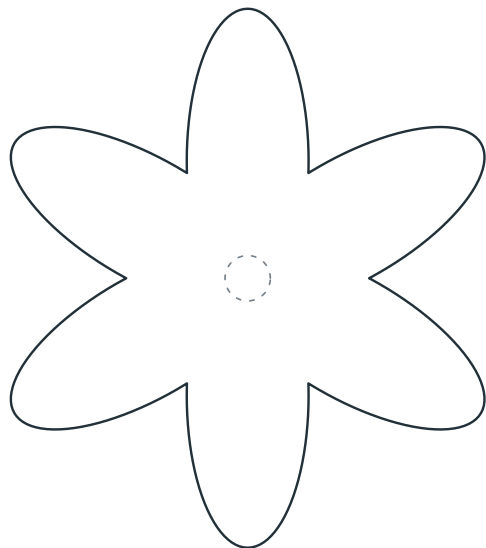



Succulent component 4

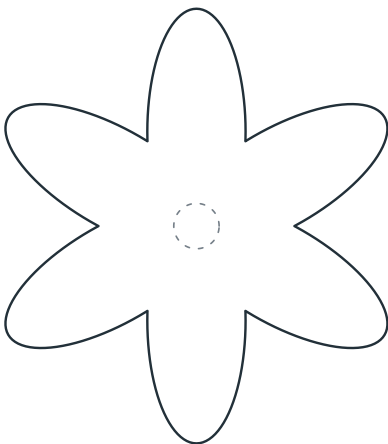

Succulent component 5

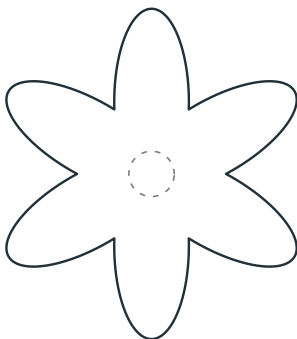

Bloom landing disc

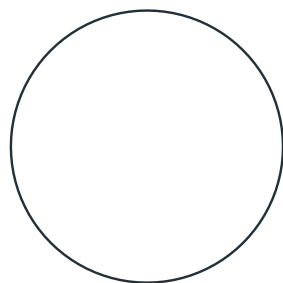

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Paper succulent rosette

pap-051 / LETTER / Instructions

PURPOSE

Paper succulent rosette developed as a measured original paper study. The packet provides the actual parts, joining or shaping marks, drawing dimensions and an assembly sequence. Print at actual size and dry-fit the parts before gluing.

DRAWING FACTS

- Five successively smaller six-lobed layers plus a 36 mm backing disc.

MATERIALS

Plain 100 to 140 gsm paper for a first dimensional trial; approximately 160 to 220 gsm card only after confirming the folds. Use a ruler, suitable scissors, a blunt scoring tool and a small amount of paper adhesive. An adult should handle internal cuts, holes and small fasteners.

HOW TO USE THESE PAGES

1. Cut the named components and keep their printed order. Score only the marked dashed folds.
2. Cup all five six-lobed layers gently, keeping their centers flat.
3. Glue the largest layer to the 36 mm backing disc. Stack the other layers from largest to smallest, rotating each so its lobes sit between those below. Glue only the centers.
4. Let the bloom dry before lifting it by the backing disc. Check the finished spread and any weak central joins.

LIMITS AND CHECKS

- Drawing dimensions describe flat paper surfaces, not verified internal capacity, load strength, fit or material compatibility.
- No mailing, food-contact, archival, toy-safety, protective-wear or cutting-machine certification is supplied.
- Make a plain-paper trial first; paper thickness and fold accuracy can change the fit.
- Trial: Measure the 50 mm reference and two named component dimensions.
- Trial: Make a complete empty trial and document fold direction, joining order, collision, stability and any fragile features.
- Trial: Repeat the trial using your chosen paper. Check that every join holds and each moving part works freely before decorating.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.